 


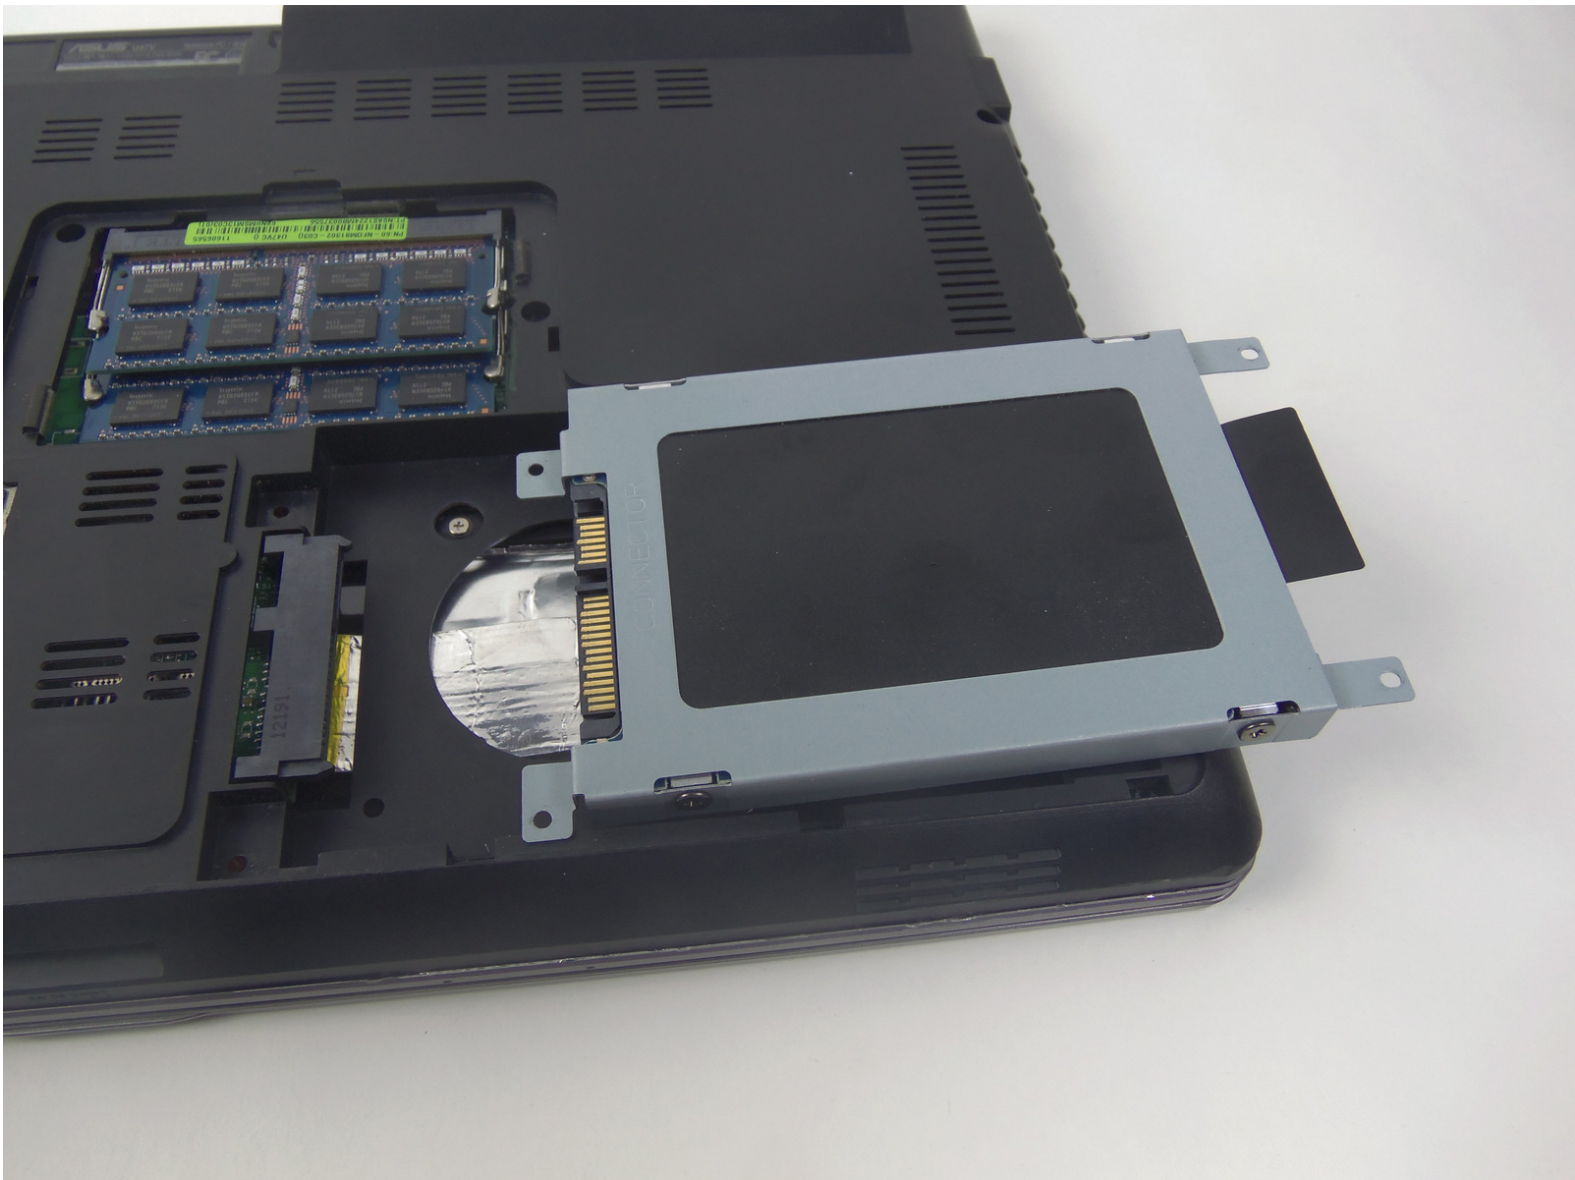

Asus U47VC-DS51 Hard Drive Replacement

Replace the hard drive in your Asus U47VC in order to get more memory space for your laptop.

Written By: Murphy Villegas



INTRODUCTION

 
Replace the hard drive in your Asus U47VC in order to get more memory space for your laptop.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — Hard Drive

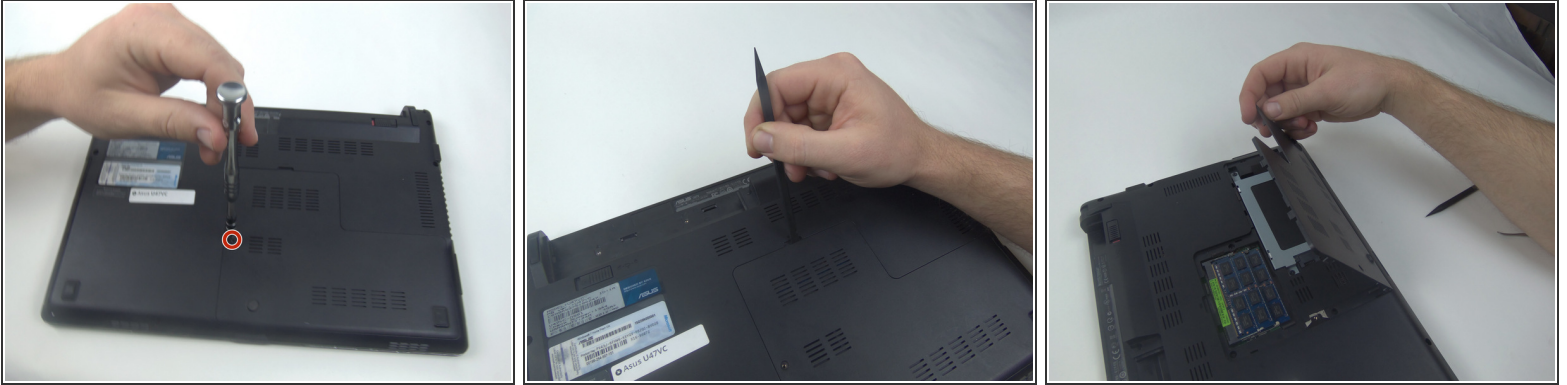

- Remove the hard drive cover.
 - Unscrew one 8mm Phillips #00 screw.
- Using the black spudger, insert its flat end under the hard drive's covering, working around to pry it off.

 Step 2

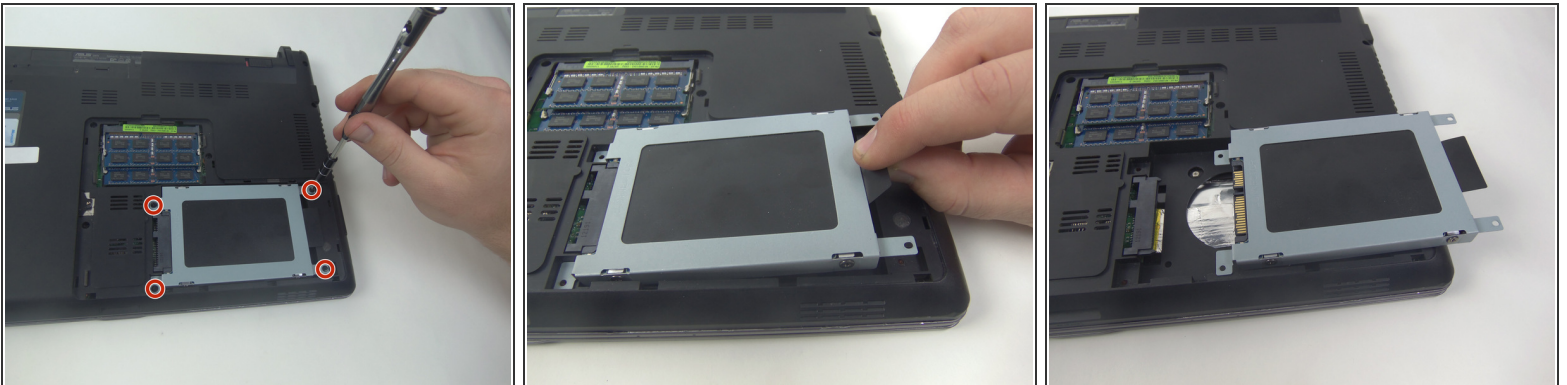

- Remove the hard drive.
 - Unscrew the four 3mm Phillips #00 screws.
- Pull the hard drive's black tab away from the laptop to free it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 08:45:44 AM.